



12-1. Specifications

These specifications are subject to change without notice.

■ Dimensions

in (mm)

			()
Item		Forester	Subaru Forester Wilderness
Overall length		182.7 ((4,640)
Overall width		71.5 (1,815)	72.2 (1,835)
Overall height	10/10	68.1 (1,730)*2 67.5 (1,715)*3	68.9 (1,750)
Wheel base	25/0	105.1 (2,670)	104.9 (2,665)
Tread	Front	61.6 (1,565)	61.4 (1,560)
rread	Rear	61.8 (1,570)	61.4 (1,560)
Ground clearance*1		8.7 (220)	9.3 (235)

^{*1:} Measured with vehicle empty *2: Models with roof rails *3: Models without roof rails

■ Engine

Engine model	FB25 (2.5 L, DOHC, non-turbo)	
Engine type	Horizontally opposed, liquid cooled 4 cylinder, 4-stroke direct injection gasoline engine	
Displacement cu-in (cc)	152 (2,498)	
Bore × Stroke in (mm)	3.70 × 3.54 (94.0 × 90.0)	
Compression ratio	12.0 : 1	
Firing order	1-3-2-4	

■ Fuel

Ś	Fuel requirement	Fuel tank capacity
	Unleaded gasoline with 87 AKI (90 RON) or higher	16.6 US gal (63 liters, 13.9 lmp gal)

For more details, refer to "Fuel" @P303.

■ Engine oil

For the checking, adding and replacing procedure or other details, refer to "Engine oil" #P462.

NOTE

The procedure for changing the engine oil and oil filter should be performed by a properly-trained expert. It is recommended that you have this service performed by your SUBARU dealer.

▼ Approved engine oil


Always use the SUBARU approved engine oil. For further details, please contact your SUBARU dealer. If the approved engine oil is unavailable, use the alternative engine oil described on the next page.

Alternative engine oil

If the SUBARU approved oil is unavailable, the following alternative oil can be used.

NOTE

Each quantity indicated here is only a guideline. The necessary quantity for replacement may differ slightly depending on the temperature and other factors.

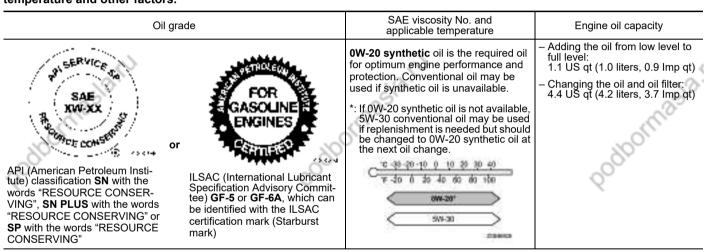

■ Front differential and rear differential gear oil

Oil	Front differential gear oil	Rear differential gear oil	
Oil grade	 SUBARU Extra MT*3 API classification GL-5 (75W-90) 	API classification GL-5 (75W-90)	
Oil capacity*1	1.4 US qt (1.3 liters, 1.1 Imp qt)	0.8 US qt (0.8 liters, 0.7 Imp qt)	
Remarks*2	"Front differential gear oil a	and rear differential gear oil" ℱP469	

^{*1:} The indicated oil quantity is only a guideline. The necessary quantity for replacement may differ slightly depending on the temperature and other factors. After refilling the gearbox with oil, the oil level should be checked.
*2: For more details about maintenance and service, refer to the indicated section.
*3: The vehicle is filled at the factory with this oil.

■ Fluids

	0.7		~ /	N-7
	Fluid	Fluid type*1	Fluid capacity*2	Remarks*3
(Continuously variable transmission fluid	Consult your SUBARU dealer.	Except for Subaru Forester Wilderness models: 11.9 US qt (11.3 liters, 9.9 lmp qt) For Subaru Forester Wilderness models: 12.4 US qt (11.7 liters, 10.3 lmp qt)	"Continuously variable transmission fluid" & P468
6	Brake fluid	FMVSS No. 116, DOT 3 or DOT 4 brake fluid	-	"Brake fluid" ℱP469

^{*1:} Use one of the indicated types of fluid.
*2: The indicated fluid quantity is only a guideline. The necessary quantity for replacement may differ slightly depending on the temperature and other

^{*3:} For more details about maintenance and service, refer to the indicated section.

504 Specifications

■ Engine coolant

Coolant capacity		Coolant type	
9.0 US qt (8.5 liters, 7.5 lmp qt)		SUBARU SUPER COOLANT	

The indicated coolant quantity is only a guideline. The necessary quantity for replacement may differ slightly depending on the temperature and other factors. For more details about maintenance and service, refer to "Cooling system" P464.

■ Electrical system

Battery type	Q-85
Alternator	12 V-150 A
Spark plugs	DILKAR7Q8 (NGK)

■ Tires

Item		Forester		Subaru Forester Wilderness	
Tire size		225/60R17 99H	225/55R18 98H	225/60R17 99T	
Wheel size		17 × 7 J	18 × 7 J	17 × 7 J	
Pressure	Front	36 psi (250 kPa, 2.5 kgf/cm²)	35 psi (240 kPa, 2.4 kgf/cm²)	33 psi (230 kPa, 2.3 kgf/cm²)	
Pressure	Rear	35 psi (240 kPa, 2.4 kgf/cm²)	33 psi (230 kPa, 2.3 kgf/cm²)	32 psi (220 kPa, 2.2 kgf/cm²)	
Wheel nut tightening torque			89 lbf·ft (120 N·m, 12 kgf·m)*1		

^{*1:} This torque is equivalent to applying approximately 88 to 110 lbf (40 to 50 kgf) at the end of the wheel nut wrench. If you have tightened the wheel nuts by yourself, have the tightening torque checked at the nearest automotive service facility as soon as possible. For the wheel nut tightening procedure, refer to "Changing a flat tire" *P426.

Ó,	Temporary spare tire size	T145/80 D17
	Temporary spare tire inflation pressure (recommended cold tire inflation pressure)	60 psi (420 kPa, 4.2 kgf/cm²)

■ Brake pedal

 Pedal clearance
 2.56 (65)*

 Pedal free play
 0.02 - 0.11 (0.5 - 2.7)

■ Brake disc

If you need information on the usage limit value of brake discs and the method for measuring them, we recommend that you consult your SUBARU dealer.

■ Brake pad

in (mm)
Brake pad wear limit 0.06 (1.5)

^{*:} Minimum value when pedal is operated with a force of 110 lbf (490 N, 50 kgf)